



## How to measure correctly the thickness of thermal paste?

Put the Wet Film Thickness Gauge vertically on the surface of the thermal paste without moving horizontally. Press slightly and remove.

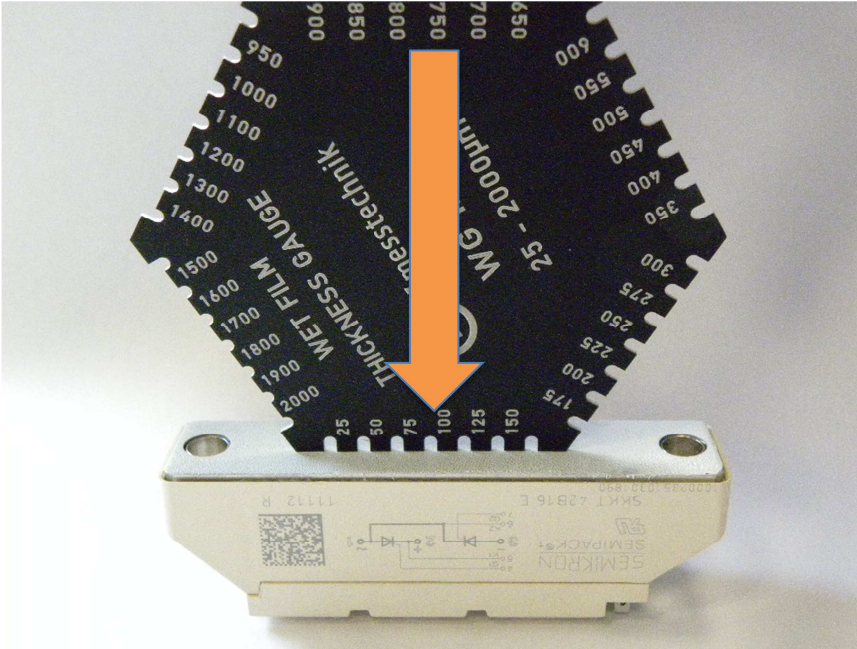

Visually inspect the marks. The result is always between the highest visible mark and the next non-visible one. In the left orange circle, there is a slight mark still visible; not in the right one. Therefore the measurement result is in between 0,050 – 0,075mm.

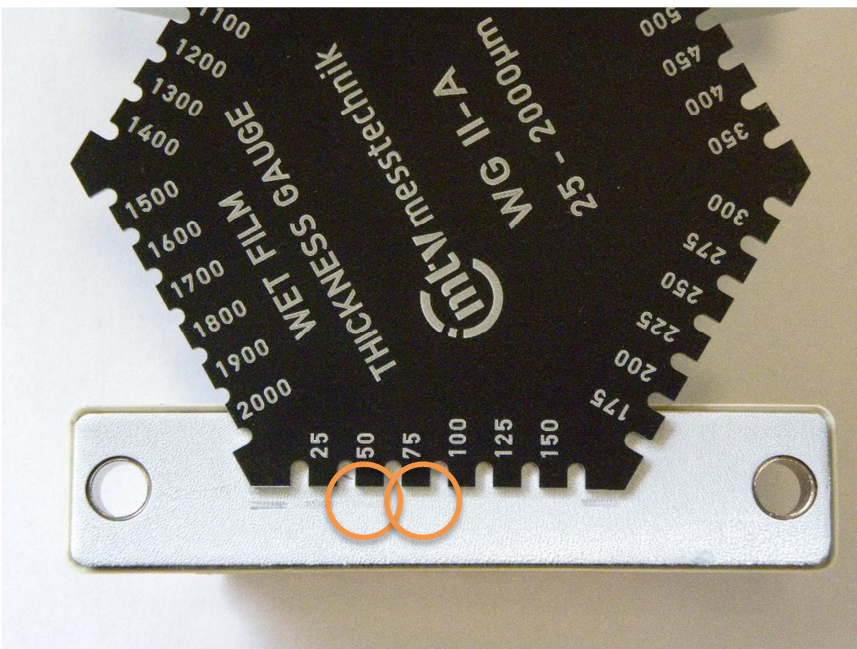

Please find the correct thickness in the Explanation Details at <http://www.sindopower.com/Technical-Explanations/>

For SemiPack® e.g. 0,05 – 0,1mm.

This article can be ordered in our online shop.

No responsibility is taken for the correctness of this information

©SindoPower 2011